



INSTALLATION

REAR FOOTPEG ADAPTER for YAMAHA 8811

PARTS INCLUDED

- 1 Set Rear Footpeg Adapters for Yamaha
- 1 Hardware Kit Containing:
 - 2 Springs
 - 2 Balls
 - 2 Detent Plates
 - 2 Button Socket Cap Screws
 - 2 Nylock Nuts
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Metric Hex Wrenches, Set of Metric Combination Wrenches, Needle Nose Pliers

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: These footpeg adapters are made for use with Kuryakyn pegs only.

STEP 2 Note how the stock footpeg pivot pin, detent washer, ball and spring are assembled before removing the pivot pin. Remove the cotter pin from the pivot pin, remove the pivot pin.

STEP 3 Remove the footpeg from the motorcycle, paying close attention to the location of the detent plate, ball and spring as the new parts will need to be installed in the same order.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025.


Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.




STEP 4 Place a dab of grease in the hole of one of the adapters. This will help hold the spring and ball in place. Place a spring first, then a ball in this hole. FIG 1

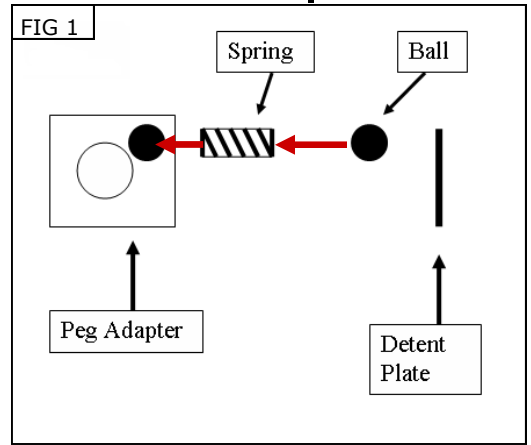

STEP 5 Place flat edge of one of the included Detent Plates into the stock footpeg clevis so the flat edge is closest to the motorcycle. The two holes in the Detent Plate will need to be along the top edge. This will allow the Detent Ball to engage one of the holes when in the up or down position. FIG 1

STEP 6 Slide the footpeg adapter into the clevis. PIC 1 It may take a little force to do this. Secure the adapter in the clevis using the stock pivot pin or you may use the included Button Socket Cap Screw.

NOTE: Make sure the Detent Spring, Ball and Plate do not move out of position when installing the adapter.

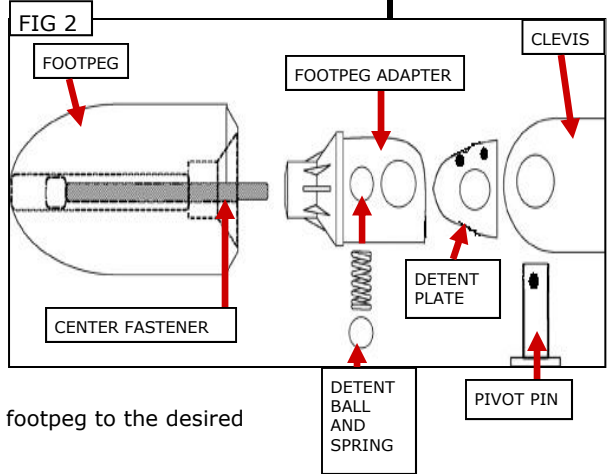

STEP 7 Replace the small washer and cotter pin, if using the stock pivot pin, or install the included Nylock Nut if using the included Button Socket Cap Screw. Tighten securely.

STEP 8 Fold the footpeg adapter to the up and down positions to ensure the Detent Ball is engaging the holes in the Detent Plate properly.

STEP 9 Install your choice of Kuryakyn Footpeg to the adapter. Position the footpeg to the desired position and tighten the center fastener securely.

STEP 10 Repeat for the other side.

WARNING! THE INSTALLATION OF AFTERMARKET PEGS MAY AFFECT GROUND CLEARANCE WHEN CORNERING.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

