

Copyright © 2015 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

**PART NO. 41-167****GADGET BAR HOLDER****CAN-AM SPYDER RT (SE MODELS ONLY) 2010-NEWER**

3/20/2015

TOOLS NEEDED: T15 TORX DRIVER

2.5 MM ALLEN WRENCH

2 MM ALLEN WRENCH

THREAD LOCK

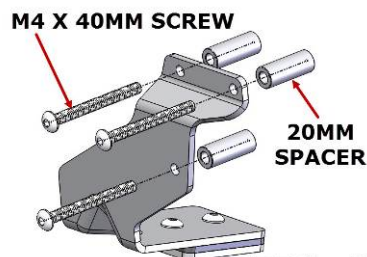
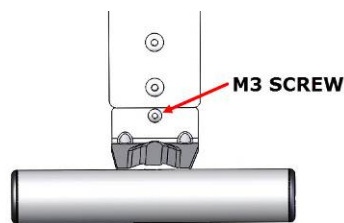
PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

NOTE: USE THREAD LOCK ON ALL FASTENERS.

NOTE: DOES NOT FIT MODELS WITH A MANUAL CLUTCH LEVER.

**INSTALLATION:**

1. USING A T15 TORX DRIVER REMOVE THE THREE SCREWS ON THE FRONT OF THE LEFT HANDLEBAR CONTROL. SEE FIG. 1. THESE WILL NOT BE REUSED.
2. APPLY THREAD LOCK NEAR THE END OF THE THREE M4 X 40MM SCREWS SUPPLIED WITH THE MOUNT.
3. ASSEMBLE THE M4 X 40MM SCREWS AND SPACERS AS SHOWN IN FIG. 2.
4. USING A 2.5MM ALLEN WRENCH INSTALL THE THREE SCREWS INTO THE LEFT HANDLEBAR CONTROL AS SHOWN IN FIG. 3 AND TIGHTEN.
5. SLIDE GADGET BAR INTO MOUNT AND INSTALL THE M3 SCREW AS SHOWN IN FIG. 4

**FIG. 1****FIG. 2****FIG. 3****FIG. 4**

Scan code with your  
smartphone to view  
video

