



INSTALLATION INSTRUCTIONS

Copyright © 2023 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-425

DESCRIPTION: PASSENGER FLOORBOARD RELOCATE

ESTIMATED INSTALLATION TIME: 15 TO 30 MIN


FITMENT: CAN-AM SPYDER RT/LTD 2020-NEWER

TOOLS NEEDED:	REMOVABLE THREAD LOCK	RATCHET	12MM SOCKET	13MM SOCKET	
INCLUDED:	MOUNT BRACKET – LEFT (1X)	MOUNT BRACKET – RIGHT (1X)	M8-1.25 X 30MM HHCS (4X)	M8-1.25 X 45MM FHCS (2X)	
EXTRA ITEMS (NOT NEEDED):	N/A				

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. *USE REMOVABLE THREAD LOCK ON ALL FASTENERS*

INSTALLATION:

1. Remove bolt holding floorboard on with 13mm socket as shown in FIG 1. This will not be reused.
2. Install bracket in desired location using any two holes to mount the bracket. Use with supplied hardware and a 13mm socket to tighten. FIG 2. and FIG 2A. are for reference on mounting. Options for mounting are up and forward and down and forward. NOTE: Brackets may be installed on either side to achieve desired floorboard location.
3. Install floorboard and use supplied bolt to floorboard secure. Tighten with 12mm socket as shown in FIG 3.

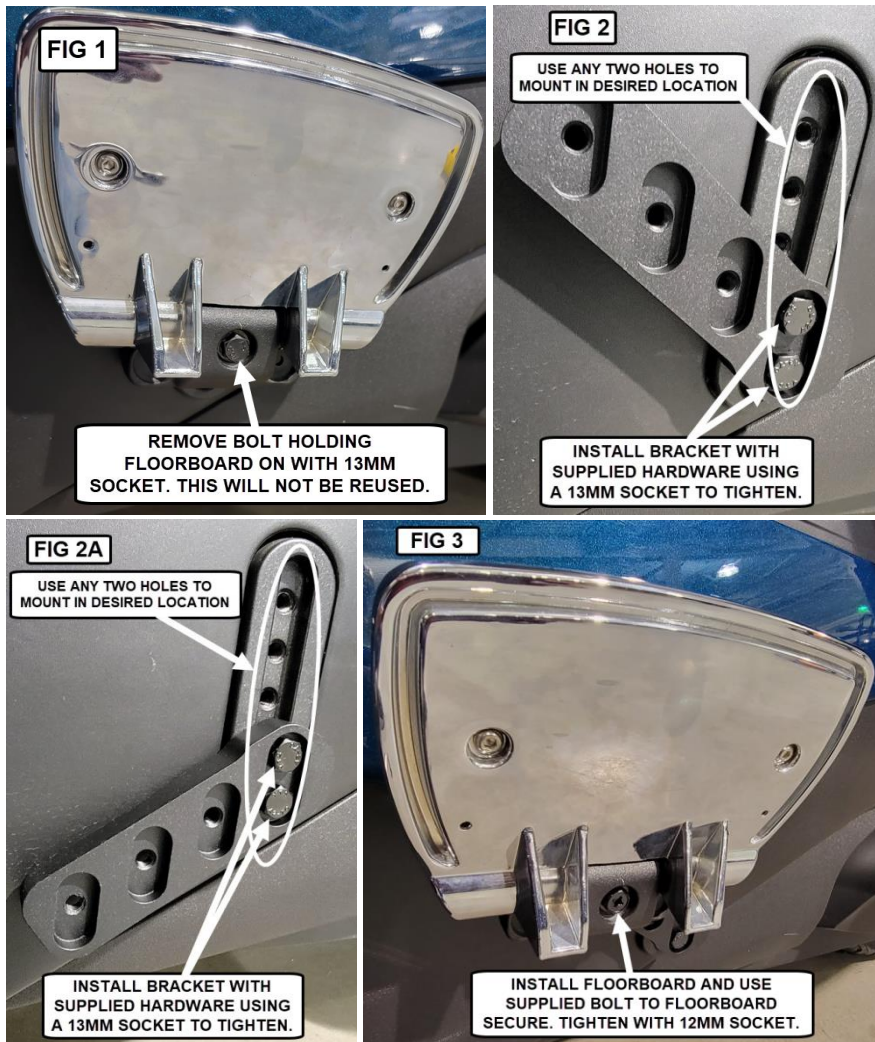

WARNING

THREADLOCK CAUSES PLASTICS TO CRACK, BREAK OR BECOME BRITTLE. WHEN USING THREADLOCK TO INSTALL HARDWARE WITH PLASTIC COMPONENTS, ONLY APPLY TO METAL COMPONENTS. IT IS CRITICAL THAT ANY EXCESS THREADLOCKER OR SPILLAGE IS CLEANED COMPLETELY FROM PLASTIC COMPONENTS IMMEDIATELY BEFORE DRYING. A DAMP TOWEL OR RAG IS THE BEST WAY TO ACHIEVE THIS. IF EXCESS THREADLOCKER IS NOT CLEANED UP RIGHT AWAY, IT COULD LEAD TO DAMAGED PRODUCTS AND VOID WARRANTY.

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.