

# BIG BIKE PARTS®

Copyright© 2020 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

7/28/2020

## INSTALLATION INSTRUCTIONS

PART NO. H41-160BK

FRONT TRUNK MINI BRA

CAN-AM SPYDER RT 2020-NEWER

TOOLS NEEDED: 10MM WRENCH


LINT FREE TOWEL

RUBBING ALCOHOL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

### INSTALLATION:

1. OPEN THE FRONT TRUNK LID AND USING A 10MM WRENCH REMOVE THE FOUR HEX BOLTS FROM THE TRUNK HINGE. **BE SURE TO SUPPORT LID.**
2. CAREFULLY REMOVE THE TRUNK LID AND LAY IT UPSIDE DOWN ON A CLEAN SOFT CLOTH.
3. USING RUBBING ALCOHOL AND A LINT FREE TOWEL, CLEAN THE INSIDE OF THE LID WHERE THE HOOK WILL BE PLACED AND LET DRY (FIG. 1).
4. REMOVE THE FOUR PIECES OF HOOK FROM THE BACK SIDE OF THE MINI BRA.
5. ALIGN THE MINI BRA ON THE TRUNK LID TO VISUALIZE THE HOOK AND LOOP LOCATION.
6. REMOVE THE MASKING AND PLACE THE FOUR PIECES OF HOOK ON THE LID AS SHOWN IN FIG. 1. PRESS THEM TIGHT TO THE LID TO SET THE ADHESIVE.
7. ATTACH THE CENTER TWO PIECES OF LOOP ON THE MINI BRA TO THE CENTER PIECES OF HOOK ON THE TRUNK LID. (FIG. 2).
8. PULL EACH END OF THE MINI BRA TIGHT AND ATTACH THE LOOP TO THE HOOK ON THE INSIDE OF THE TRUNK LID AS SHOWN IN FIG. 2.
9. REINSTALL THE TRUNK LID AND CLOSE COMPLETELY.

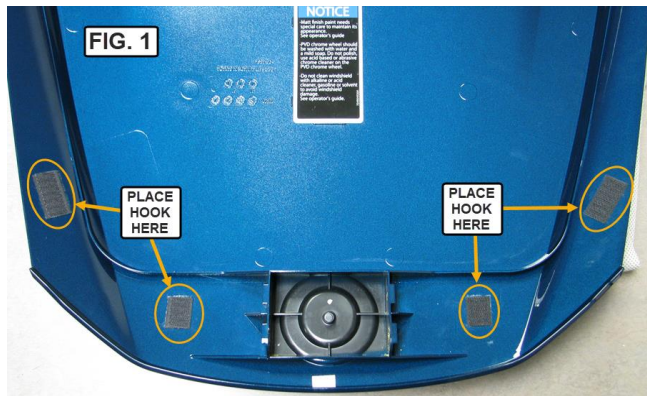

# BIG BIKE PARTS®

Copyright© 2020 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

7/27/2020

## INSTALLATION INSTRUCTIONS

PART NO. H41-160BK

FRONT TRUNK MINI BRA

CAN-AM SPYDER RT 2020-NEWER

TOOLS NEEDED: 10MM WRENCH

LINT FREE TOWEL

RUBBING ALCOHOL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

### INSTALLATION:

1. OPEN THE FRONT TRUNK LID AND USING A 10MM WRENCH REMOVE THE FOUR HEX BOLTS FROM THE TRUNK HINGE. **BE SURE TO SUPPORT LID.**
2. CAREFULLY REMOVE THE TRUNK LID AND LAY IT UPSIDE DOWN ON A CLEAN SOFT CLOTH.
3. USING RUBBING ALCOHOL AND A LINT FREE TOWEL, CLEAN THE INSIDE OF THE LID WHERE THE HOOK WILL BE PLACED AND LET DRY (FIG. 1).
4. REMOVE THE FOUR PIECES OF HOOK FROM THE BACK SIDE OF THE MINI BRA.
5. ALIGN THE MINI BRA ON THE TRUNK LID TO VISUALIZE THE HOOK AND LOOP LOCATION.
6. REMOVE THE MASKING AND PLACE THE FOUR PIECES OF HOOK ON THE LID AS SHOWN IN FIG. 1. PRESS THEM TIGHT TO THE LID TO SET THE ADHESIVE.
7. ATTACH THE CENTER TWO PIECES OF LOOP ON THE MINI BRA TO THE CENTER PIECES OF HOOK ON THE TRUNK LID. (FIG. 2).
8. PULL EACH END OF THE MINI BRA TIGHT AND ATTACH THE LOOP TO THE HOOK ON THE INSIDE OF THE TRUNK LID AS SHOWN IN FIG. 2.
9. REINSTALL THE TRUNK LID AND CLOSE COMPLETELY.

