


SHOW CHROME®

SHOWCHROMEUSA.COM

1-888-244-2453

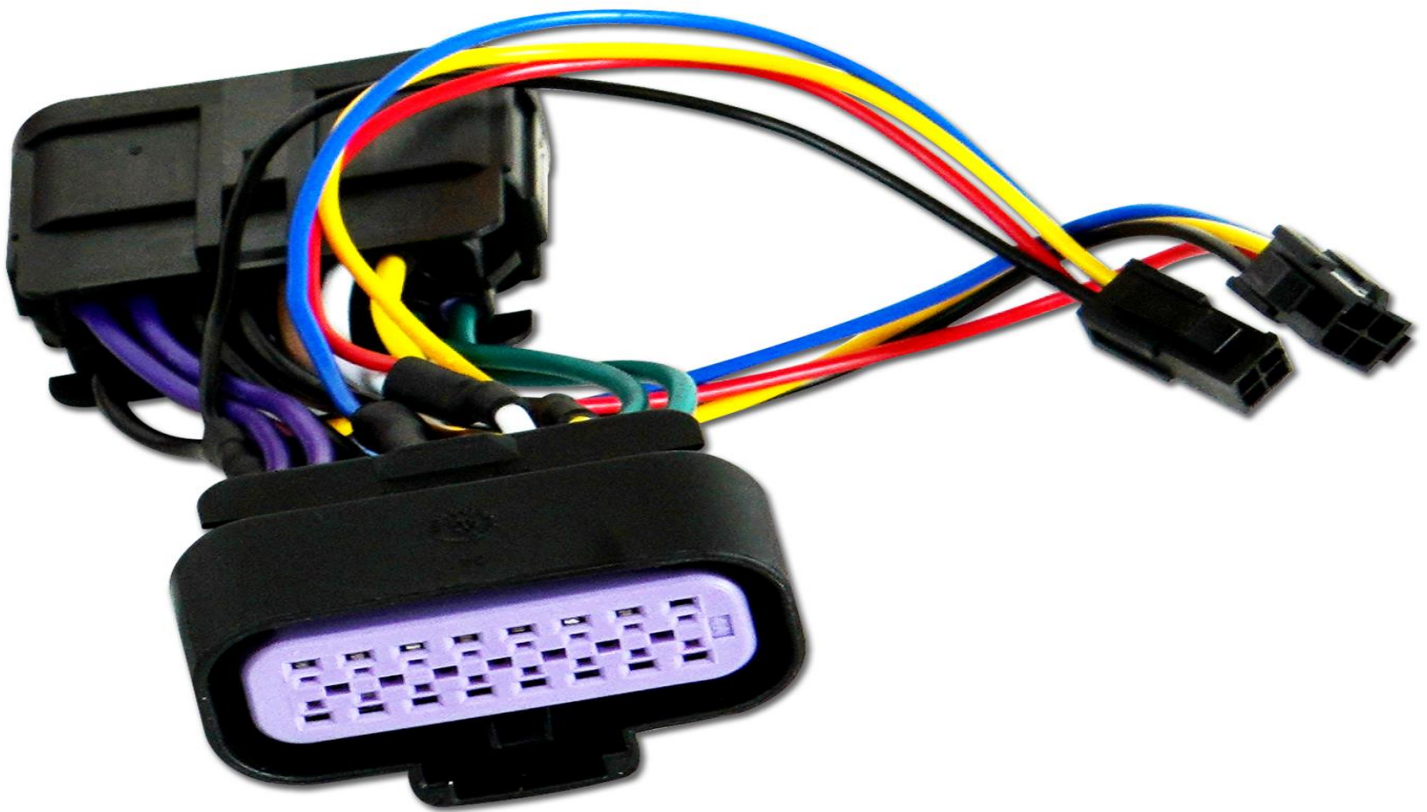

PLUG N' PLAY WIRE HARNESS

PRODUCT NUMBER: 41-265WI

INSTALLATION INSTRUCTIONS



RIDE WITH US!

Founded in 1981 and located in Northern Wisconsin, Show Chrome believes that everyone deserves convenience, safety, and style. All of our products are designed by riders for riders to achieve just that.

Our products are designed and engineered in the USA and 50% of our products are manufactured in the USA: your investment in us and our community.

Please let us know how we can make your ride even better. Our team of riders in Wisconsin answers every customer call Monday – Friday, 9am – 5pm Central Time.

Sincerely,
Your Show Chrome Team
Rice Lake, WI, USA

1 | INTRODUCTION

RIDE WITH CONFIDENCE

These instructions are for both riders and dealers – written as a step-by-step guide with an eye for detail, just like our products. It's all part of your experience with Show Chrome, and we take that seriously.

LET US KNOW!

Please review the instructions before diving in, and if things get uncomfortable, don't hesitate. Reach out to us. We're here to help and offer direct, human customer service based in Rice Lake, WI, USA – every time at 888-244-2453.

2 | THE DESIGNER



NOTE FROM THE DESIGNER

The 41-265WI Plug N' Play Harness is easy to install. This simple harness plugs in-line with the OEM tail harness making your life easier for installing this product. Finally, I wanted this to be easy for you to install so you're back riding faster.

I hope this wire harness makes it easier for you to install Show Chrome accessories to your Spyder, and hopefully you come back and buy more of our high quality products from us!

Ride safely,

Jonathan Gustum
R&D Engineer, Show Chrome

3 | DETAILS & ACCESSORIES

PRODUCT INFO

Product: Plug N' Play Wire Harness

Part Number: 41-265WI

Fitment: Can-Am RT/LTD 2020+, F3 T/LTD 2017+


INCLUDED

Plug N' Play Wire Harness (X1)


TOOLS NEEDED

NO TOOLS REQUIRED

TIME TO INSTALL DIFFICULTY LEVEL

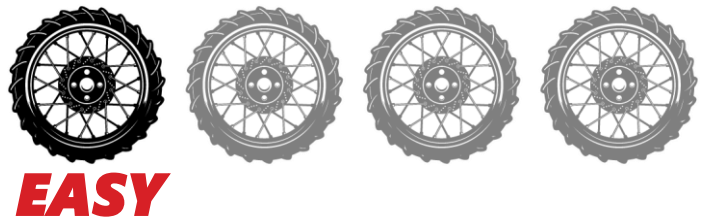


4 | INSTRUCTIONS

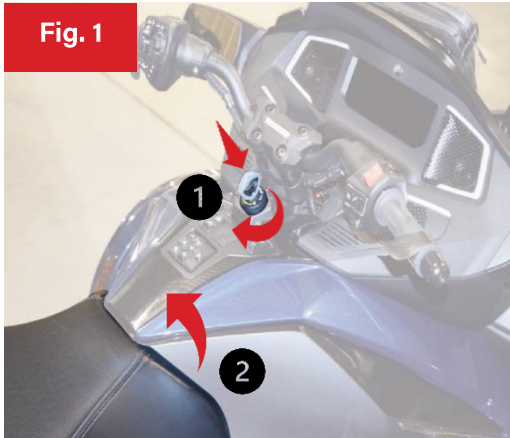


1. If you have a driver backrest installed, it must be removed to allow the passenger seat to be removed in the upcoming steps.
2. Release the driver seat latch by pushing in on the key & turning it clockwise. Lift up the front of the driver seat to open it. See **FIG. 1** for a visual.

1 Push key down and turn clockwise.

2 Lift front of driver seat to open.

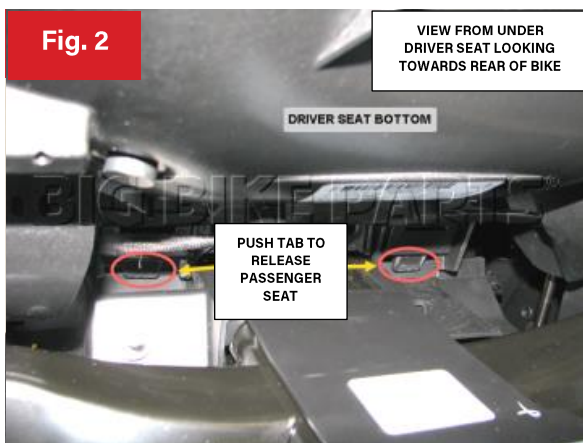


3. Press the two tabs securing the front of the passenger seat from under the driver seat and lift slightly to release, as shown in **FIG. 2**. (Located at the front bottom of the passenger seat under the driver seat).
4. Close the driver seat to allow you to lift the front of the passenger seat up past the driver seat and slide it forward to loosen it.

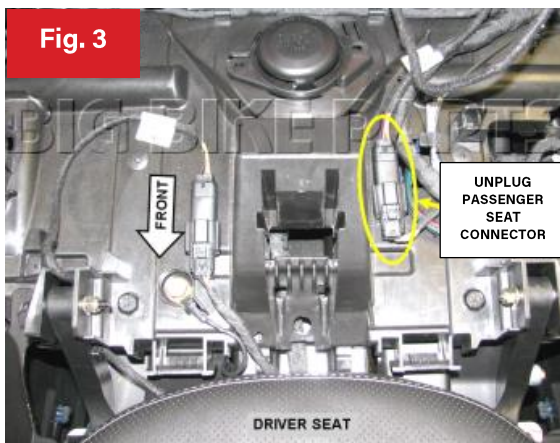

5. Disconnect the passenger seat wire harness as indicated in **FIG. 3**. Set the seat aside on a clean surface or towel.



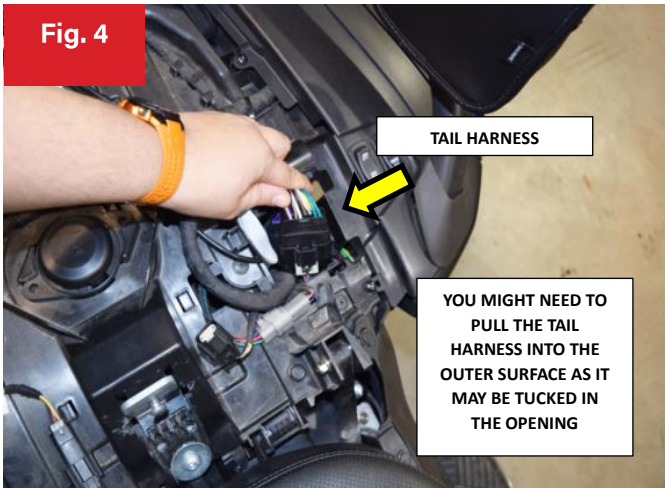

6. Locate the stock OEM tail harness location on the left side where the passenger seat is usually located. See **FIG. 4**.



9. Unplug the stock OEM tail harness and plug in the Show Chrome's Plug N' Play Wire Harness in line with the stock OEM tail harness. As seen in **FIG. 5** and **FIG. 6**.



7. Plug in your Show Chrome accessory to the Plug N' Play Wire Harness accordingly.
8. Repeat steps 1-7 in reverse order to put your Spyder back together.

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTIONS MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

