

Copyright © 2017 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 20-401

WINDSHIELD

FITMENT: CAN-AM SPYDER F3T AND LIMITED 2016-NEWER

9/1/2017


TOOLS NEEDED: T25 TORX DRIVER

3MM ALLEN WRENCH

REMOVABLE THREAD LOCK

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.**ESTIMATED INSTALLATION TIME: 15 TO 20 MIN.****INSTALLATION:**

1. USING A T25 TORX DRIVER REMOVE THE FOUR SCREWS HOLDING THE OEM WINDSHIELD TO MOUNTS ON THE SPYDER.
2. REMOVE THE OEM WINDSHIELD. THE FOUR TORX SCREW WILL NOT BE REUSED. THE RUBBER WASHERS AND FLAT WASHERS WILL BE REUSED.
3. THE NEW WINDSHIELD CAN BE MOUNTED AT TWO DIFFERENT ANGLES BY USING ONE OR TWO SPACERS IN THE TOP SCREWS. SEE **FIG.1 AND 2.**
4. INSTALL THE NEW WINDSHIELD AS SHOWN IN THE FIGURES BELOW. USE A SMALL DROP OF REMOVABLE THREAD LOCK ON EACH SCREW.

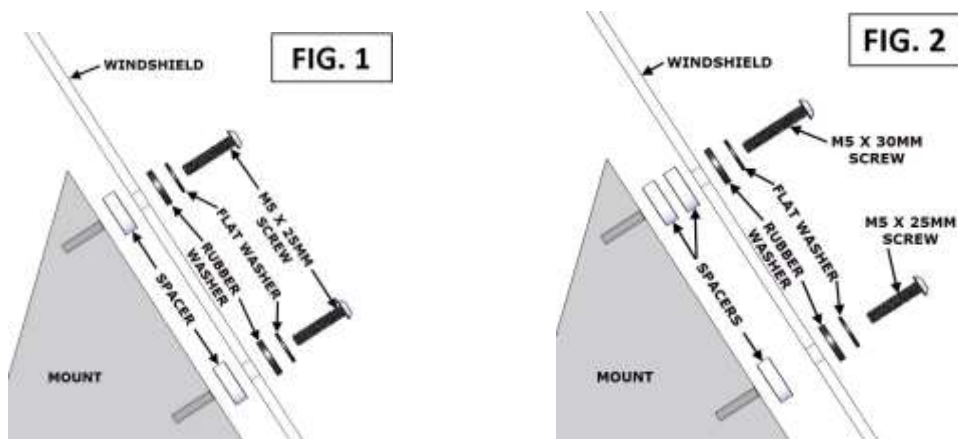

Copyright © 2017 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 20-401

WINDSHIELD

FITMENT: CAN-AM SPYDER F3T AND LIMITED 2016-NEWER

9/1/2017

TOOLS NEEDED: T25 TORX DRIVER

3MM ALLEN WRENCH

REMOVABLE THREAD LOCK

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.**ESTIMATED INSTALLATION TIME: 15 TO 20 MIN.****INSTALLATION:**

1. USING A T25 TORX DRIVER REMOVE THE FOUR SCREWS HOLDING THE OEM WINDSHIELD TO MOUNTS ON THE SPYDER.
2. REMOVE THE OEM WINDSHIELD. THE FOUR TORX SCREW WILL NOT BE REUSED. THE RUBBER WASHERS AND FLAT WASHERS WILL BE REUSED.
3. THE NEW WINDSHIELD CAN BE MOUNTED AT TWO DIFFERENT ANGLES BY USING ONE OR TWO SPACERS IN THE TOP SCREWS. SEE **FIG.1 AND 2.**
4. INSTALL THE NEW WINDSHIELD AS SHOWN IN THE FIGURES BELOW. USE A SMALL DROP OF REMOVABLE THREAD LOCK ON EACH SCREW.

