

Copyright © 2014 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-170

LAMPGARD™

CAN-AM SPYDER RT - ALL

5/23/2014


TOOLS NEEDED: RUBBING ALCOHOL

LINT FREE TOWEL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

INSTALLATION:

1. CLEAN THE HEADLIGHT LENS ON THE SPYDER AND THE INSIDE OF THE LAMPGARDS WITH RUBBING ALCOHOL AND LET DRY.
2. REMOVE THE PROTECTIVE FILM FROM THE BACK OF ONE OF THE DUAL LOCK FASTENERS AND ADHERE IT TO THE INSIDE OF THE RIGHT LAMPGARD.
3. USE THE DIAGRAM BELOW TO POSITION EACH OF THE FASTENERS. PLACE 4 ON EACH LAMPGARD.
4. PLACE THE MATES FOR THE DUAL LOCK FASTENER TO THE ONES ON THE LAMPGARD. (NOTE: THESE DUAL LOCKS MATE TO EACH OTHER.)
5. PLACE THE LAMPGARD ON THE HEADLIGHT SO THE DUAL LOCK FASTENERS STICK TO THE HEADLIGHT. ONCE IN PLACE, REMOVE THE LAMPGARD LEAVING THE MATE OF THE DUAL LOCK FASTENERS ON THE HEADLIGHT AND THE OTHER MATE ON THE LAMPGARD. THE DUAL LOCK FASTENERS NEED TO SIT ON THE LAMPGARD AND ON THE BIKE FOR 24 HOURS BEFORE EXPOSED TO WEATHER OR LOAD FOR PROPER ADHESION OF THE TAPE.

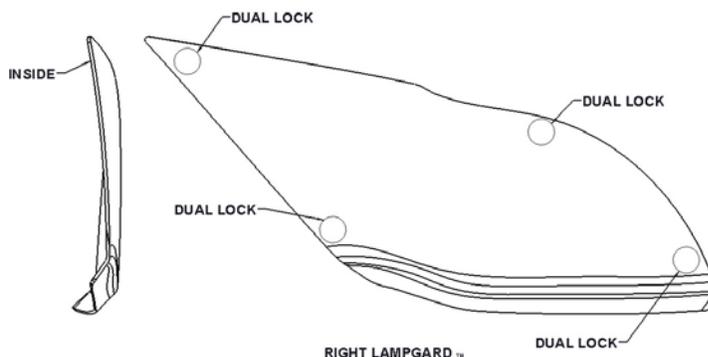

Scan code with
your smartphone
to view video



Copyright © 2014 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-170

LAMPGARD™

CAN-AM SPYDER RT - ALL

5/23/2014


TOOLS NEEDED: RUBBING ALCOHOL

LINT FREE TOWEL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

INSTALLATION:

1. CLEAN THE HEADLIGHT LENS ON THE SPYDER AND THE INSIDE OF THE LAMPGARDS WITH RUBBING ALCOHOL AND LET DRY.
2. REMOVE THE PROTECTIVE FILM FROM THE BACK OF ONE OF THE DUAL LOCK FASTENERS AND ADHERE IT TO THE INSIDE OF THE RIGHT LAMPGARD.
3. USE THE DIAGRAM BELOW TO POSITION EACH OF THE FASTENERS. PLACE 4 ON EACH LAMPGARD.
4. PLACE THE MATES FOR THE DUAL LOCK FASTENER TO THE ONES ON THE LAMPGARD. (NOTE: THESE DUAL LOCKS MATE TO EACH OTHER.)
5. PLACE THE LAMPGARD ON THE HEADLIGHT SO THE DUAL LOCK FASTENERS STICK TO THE HEADLIGHT. ONCE IN PLACE, REMOVE THE LAMPGARD LEAVING THE MATE OF THE DUAL LOCK FASTENERS ON THE HEADLIGHT AND THE OTHER MATE ON THE LAMPGARD. THE DUAL LOCK FASTENERS NEED TO SIT ON THE LAMPGARD AND ON THE BIKE FOR 24 HOURS BEFORE EXPOSED TO WEATHER OR LOAD FOR PROPER ADHESION OF THE TAPE.

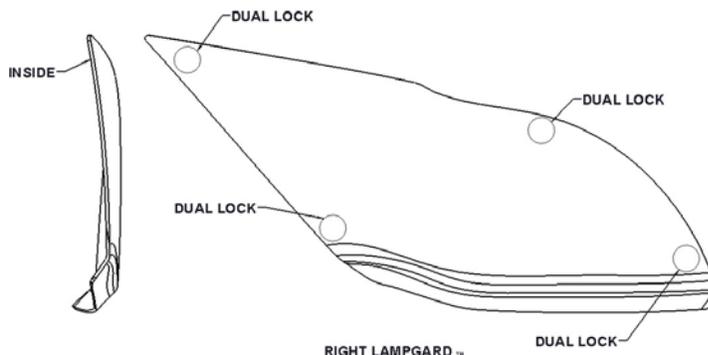

Scan code with
your smartphone
to view video

