

## INSTALLATION INSTRUCTIONS

### NECK COVERS FOR INDIAN®

5195

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**⚠ WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**⚠ CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

#### NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Left Cover	1	Wire Harness Cover
1	Right Cover	3	M4 x .7 x 12mm Socket Head Cap Screws
1	Left Downtube Cover	3	Alcohol Pad
1	Right Downtube Cover		

#### YOU WILL ALSO NEED:

Metric socket bit set and ratchet, clean rag and warm soapy water

#### NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

#### STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

#### NOTICE

INSTALLATION CANNOT BE DONE IF THE MOTORCYCLE IS TIED DOWN. THE FRONT WHEEL WILL NEED TO TURN TO THE LEFT AND TO THE RIGHT FOR PROPER INSTALLATION.

#### NOTICE

AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

#### STEP 2

On the highway bar, loosen the bottom bolt on each side, and remove the top bolts. Set the top bolt aside, it will be used later.

#### STEP 3

Refer to PIC 2. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the downtubes with the included alcohol pads to remove any wax or polish; allow the area to dry completely.

#### STEP 4

Starting on the left (clutch) side of the motorcycle, turn the front wheel to the right to gain access to the left side. On the backside of the left-side downtube, unfasten the clamp holding the clutch cable to it. Set hardware aside, it will be reused.



## INSTALLATION INSTRUCTIONS

### NECK COVERS FOR INDIAN®

5195

-CONTINUED-

- STEP 5** Refer to PIC 3. Locate provided Left Cover. Align and place the left cover at the top of the neck, and over the clutch cable. Be sure the clutch cable is not pinched between the cover and the downtube. Hold the cover in place.

*Note: It may be helpful to have an additional person to help with installation.*

- STEP 6** Turn the front wheel to the left to gain access to the right side. Located provided right cover and three (3) M4 x .7 x 12mm screws.

- STEP 7** Refer to PIC 4. Align and place the Right Cover at the top of the right-side of the neck, be sure the mounting holes of the covers align. Insert two (2) screws into the lower mounting holes, located near the engine block and loosely tighten them.

- STEP 8** Insert the last screw into the mounting hole at the top of the covers and loosely tighten.

*Note: The fastened covers should be loose enough to slide the downtube covers under them.*

#### NOTICE

**ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.**

**DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).**

- STEP 9** Refer to PIC 5. Locate the Left and Right Downtube Covers. The spring clamps on the downtube covers are considered the bottom end of them. The right cover has a small cutout near the top.

- STEP 10** Test fit the downtube covers on each side, by aligning them on the downtube and then sliding them up and under the bottom section of the covers. Use masking tape to make alignment marks; remove the downtube covers.


- STEP 11** Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

- STEP 12** Refer to PIC 6 and 7. Align and place the downtube covers; press them into place for one minute; full bonding will occur after 24 hours.


*Note: If the bike is going to be operated before full bonding occurs, secure the downtube covers to the bike with a good quality masking or painter's tape.*




PIC 3

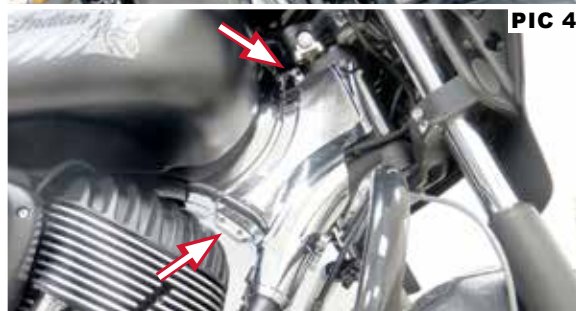

PIC 4

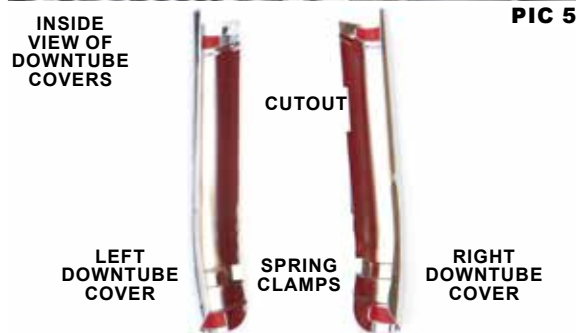

PIC 5

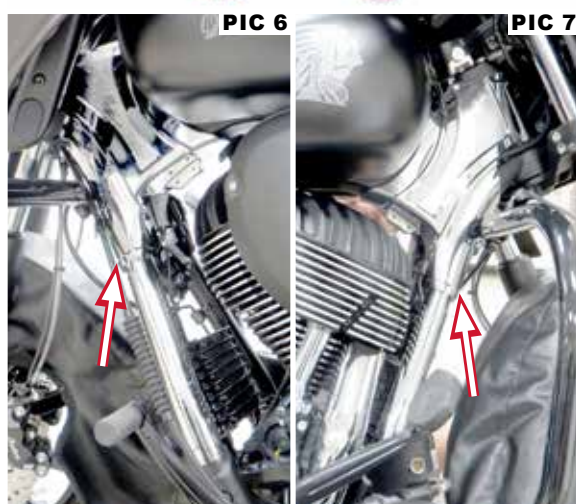

PIC 6

PIC 7

[KURYAKYN.COM](http://KURYAKYN.COM)

## INSTALLATION INSTRUCTIONS

### NECK COVERS FOR INDIAN®

5195

-CONTINUED-

**STEP 13** Fully tighten the three (screws) securing the covers together.

**STEP 14** Located provided Wire Harness Cover. On the left side of the motorcycle, and with the front wheel turned to the right, align and test fit the Wire Harness Cover at the top of the Left Cover.

**STEP 15** Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

**STEP 16** Refer to PIC 8. Align and place the wire harness cover; press it into place for one minute; full bonding will occur after 24 hours.

*Note: If the bike is going to be operated before full bonding occurs, secure the wire harness cover to the bike with a good quality masking or painter's tape.*

**STEP 17** Locate the mounting hardware and clamp for the clutch cable that was removed in Step 3. Realign and secure the clutch cable to the backside of the downtube.

**STEP 18** Locate the highway bar mounting hardware that was removed in Step 2. Align the highway bar with the mounting holes on the bike secure in place with mounting hardware. Fully tighten all highway bar hardware.

#### TORQUE VALUE FOR HIGHWAY BAR

Upper Bolts: 18 FT-LBS (24.4 Nm)

Lower Bolts: 35 FT-LBS (47.5 Nm)



#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

## INSTALLATION INSTRUCTIONS

### NECK COVERS FOR INDIAN®

5195

-CONTINUED-

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

#### RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at [www.kuryakyn.com/legal-notice](http://www.kuryakyn.com/legal-notice).

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at [www.kuryakyn.com/legal-notice](http://www.kuryakyn.com/legal-notice)