

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

**PART NO. 52-839B**

**GPS/PHONE HOLDER**

GL1500 AND GL1800, HONDA AND YAMAHA CRUISERS, INDIAN 111 C.I. HARLEY-DAVIDSON<sup>®</sup> WITH 1.5" OR 1.56" BOLT SPACING

1/10/2019

TOOLS NEEDED:	5MM ALLEN WRENCH (METRIC)	4MM (5/32") ALLEN WRENCH	10MM WRENCH	REMOVABLE THREAD LOCK	PHILLIPS SCREWDRIVER
	3MM ALLEN WRENCH	T30 TORX DRIVER (HARLEY)	2MM ALLEN WRENCH	8MM WRENCH	

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. *ESTIMATED INSTALLATION TIME: 15 TO 20 MIN.*


**NOTE: THIS CAN BE MOUNTED ON EITHER THE LEFT OR THE RIGHT SIDE OF MOTORCYCLE. THE INSTRUCTIONS ARE FOR A LEFT SIDE INSTALLATION. USE REMOVABLE THREAD LOCK ON ALL FASTENERS.**

**INSTALLATION:**

1. REMOVE THE TWO ALLEN BOLTS THAT HOLD THE CLUTCH LEVER TO THE HANDLEBARS. SEE FIG. 1. THEY WILL NOT BE REUSED.
2. APPLY THREAD LOCK NEAR THE END OF THE TWO SCREWS SUPPLIED WITH THE MOUNT. (M6 X 40 FOR HONDA AND YAMAHA) (1/4-20 X 1-3/4 FOR H-D)
3. ASSEMBLE THE SCREWS AND SPACERS AS SHOWN IN FIG. 2.
4. USING A 4MM (5/32") ALLEN WRENCH INSTALL THE MOUNT TO THE BIKE. SEE FIG. 3.
5. ASSEMBLE THE RECEIVER TO THE MOUNTING PLATE USING THE M6 X 12MM SCREW, LOCK WASHER, AND LOCK NUT AS SHOWN IN FIG. 4.
6. ADJUST THE ANGLE OF THE RECEIVER MOUNT AND TIGHTEN USING A 4MM ALLEN WRENCH AND A 10MM WRENCH.
7. GPS/PHONE HOLDER CAN BE ROTATED 90 DEGREES AND MADE WIDER. SEE FIG. 5.
8. INSTALL THE SAFETY STRAP BY REMOVING THE TOP PHILLIPS SCREW ON THE BACK AND REINSTALLING IT THROUGH THE HOLE ON THE STRAP. SEE FIG. 6.
9. SLIDE THE GPS/PHONE HOLDER INTO THE MOUNT AS SHOWN IN FIG. 7. INSTALL THE M3 SCREW FOR SECURITY.
10. TIGHTEN THE SCREWS AND ADJUST THE MOUNT TO THE DESIRED POSITION.
11. TURN THE LOCKING KNOB COUNTER CLOCKWISE UNTIL YOU SEE THE SET SCREW ON THE KNOB AND OPEN THE CLAMP. SEE FIG. 8.
12. SQUEEZE THE CLAMP TOGETHER AND ROTATE THE KNOB CLOCKWISE UNTIL THE ARROWS LINE UP. SEE FIG. 9.
13. TIGHTLY WRAP SAFETY STRAP AROUND THE DEVICE BEFORE USE.



**FIG. 1**

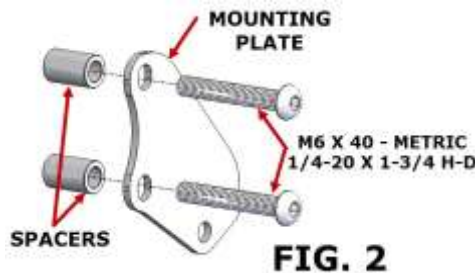


**FIG. 2**



**FIG. 3**

LEFT SIDE

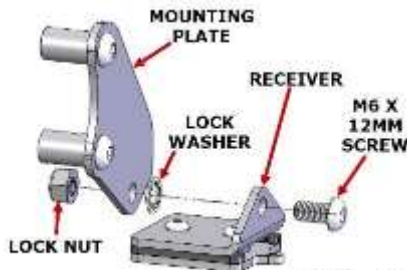

**FIG. 4**



**FIG. 5**




**FIG. 6**



**FIG. 7**



**FIG. 8**

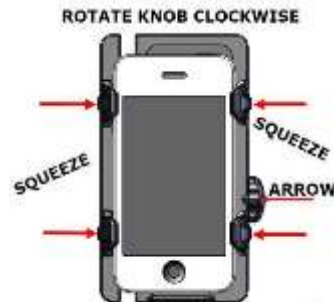

**FIG. 9**

Scan code with your smartphone to view video

