

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. H40-402BK

TANK POUCH

12/23/2019

FITMENT: CAN-AM RYKER 2019- NEWER

TOOLS NEEDED: RUBBING ALCOHOL

LINT FREE TOWEL

RULER

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

ESTIMATED INSTALLATION TIME: 10 TO 15 MIN.


INSTALLATION:

1. REMOVE THE POUCH FROM THE PACKAGE.
2. CLEAN THE BACK SIDE OF THE TANK SHROUD WITH RUBBING ALCOHOL AND A LINT FREE TOWEL AS SHOWN IN FIG. 1. LET DRY COMPLETELY.
3. PEEL THE BACKER FROM THE HOOK AND LOOP ON THE BACK SIDE OF THE POUCH (FIG. 2). NOTE: BE SURE NOT TO TOUCH ADHESIVE WITH ANYTHING BEFORE IT IS INSTALLED. ADHESIVE ON THE HOOK AND LOOP IS A ONE TIME INSTALLATION.
4. WHILE HOLDING THE POUCH CENTERED ON THE TANK SHROUD (FIG. 3), WRAP THE SIDES AROUND AND UNDER THE SHROUD PRESSING THE HOOK AND LOOP AGAINST THE INSIDE OF THE TANK SHROUD TO SECURE. (BE SURE ENTIRE AREA OF HOOK AND LOOP IS PRESSED TIGHT AGAINST THE INSIDE OF THE TANK SHROUD)
5. LET ADHESIVE CURE FOR 24 HOURS BEFORE USE.

FIG. 1



FIG. 2

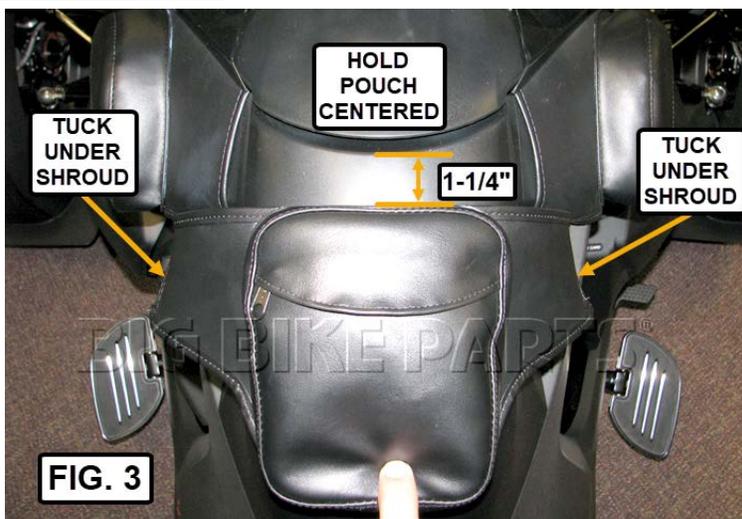

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

NOTICE

THIS IS AN ADHESIVE BACKED PRODUCT. CAUTION MUST BE TAKEN DURING INSTALLATION TO PROPERLY POSITION FOR ONE TIME PLACEMENT. REPEAT TRIALS WILL RESULT IN FAILURE OF THE ADHESIVE.